Inductive sensor Bi1-Q6,5-Y1

	6,5 7 13 20 17 0 2,3 9,5 5,25 17	
Туре	Bi1-Q6,5-Y1	
Ident-No.	4004000	
Rated operating distance Sn	1 mm	
Mounting condition	flush	

Assured sensing range Correction factors Repeatability Temperature drift Hysteresis Ambient temperature **Output function** Switching frequency Voltage Non-actuated current consumption Actuated current consumption

Approval acc. to

 $\label{eq:linear} \begin{array}{l} \mbox{Internal inductance } (L_i) \ / \ \mbox{capacitance } (C_i) \\ \mbox{Device designation} \end{array}$

Housing

Dimensions Housing material Material active face Connection Cable quality Cable cross section: Vibration resistance Shock resistance Degree of protection 150 nF / 150 μH (a) II 2 G Ex ia IIC T6/II 1 D Ex ia D 20 T95 °C (max. U_i = 20 V, I_i = 60 mA, P_i = 80 mW) rectangular, Q6.5 20 x 17 x 6.5 mm

20 x 17 x 6.5 mm plastic, PP GR-20 plastic, PP GR-20 cable Ø 3, blue, Lif9YYW, PVC, 2 m 2 x 0.14mm² 55 Hz (1 mm) 30g (11 ms) IP67

KEMA 02 ATEX 1090X issue no.3

(0,81 x Sn) mm

2 %

± 10 %

-25...+ 70 °C

2-wire, NAMUR

Nom. 8.2 VDC

1... 10 %

2 kHz

≥ 2.1 mA


1.2 mA

St37 = 1, V2A ~ 0.7, Ms ~ 0.4, Al ~ 0.3



- ATEX category II 2 G, Ex zone 1
- ATEX category II 1 D, Ex zone 20
- SIL2 as per IEC 61508
- rectangular, height 6.5 mm
- lateral active face
- plastic, PP GR-20
- 2-wire DC, nom. 8.2 VDC
- Output acc. to DIN EN 60947-5-6 (NAMUR)
- Cable connection

Wiring diagram



Functional principle

Inductive sensors are designed for wearfree and non-contact detection of metal objects. For this purpose they use a highfrequency electro-magnetic AC field that interacts with the target. Conserning inductive sensors, this field is generated by an LC resonant circuit with a ferrite core coil.

Inductive sensor Bi1-Q6,5-Y1




Industri<mark>al</mark> Au<mark>tomation</mark>

Mounting instructions	minimum distances
Distance D	2 x B
Distance W	3 x Sn
Distance S	1 x B
Distance G	6 x Sn

Width of the active face B

6.5 mm

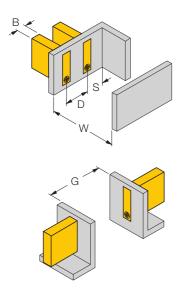

Inductive sensor Bi1-Q6,5-Y1



Accessories

Type code	Ident-	Short text	Dimension drawing
	No.		
IM1-22EX-R	7541231	Isolating switching amplifier, 2 channel; 2 transistor	
		outputs; input for NAMUR signals; selectable ON/	
		OFF mode for wire-break and short-circuit monito-	104
		ring; adjustable signal flow (N.O./ N.C.mode); remo-	
		vable terminal blocks; 18 mm width; universal voltage	110
		supply unit	√ ¹⁸





Operating manual

Intended usage

This device fulfils the directive 94/9/EC and is suited for use in explosion hazardous areas as per EN60079-0, -11 and EN61241-0, -11 Further it is suited for use in safety-related systems, including SIL2 as per IEC 61508. In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

For use in explosion hazardous areas conform to classification

II 2 G and II 1 D (Group II, Category 2 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equipment for dust atmospheres).

Marking (see device or technical data sheet)

🐵 II 2 G and Ex ia IIC T6 as per EN60079-11 and 🐵 II 1 D Ex iaD 20 T95°C as per EN60079-11 and EN61241-0 and -11

Local admissible ambient temperature

-25...+70 °C

Installation / Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas. Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is only suited for connection to approved Exi circuits compliant to EN60079-0 and -11. Please observe the maximum admissible electrical values. After connection to other circuits the sensor may no longer be used in EExi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14). When employed in safety systems to IEC 51408 it is required to assess the failure probability (PFD) of the complete circuitry.

Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device. If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields. The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet.

Repair / maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.